


Automobility Vehicle Documentation Form AM-310-B
Vehicle Information Data:

Make FORD Model Focus Year 2009/10


Hand Control Model # 21221

Notes:



- TILT IN UPRIGHT POSITION
- CAMLOCKS AGAINST DASH ON LEFT SIDE AND BETWEEN IGNITION AND DASH ON RIGHT SIDE.
- CUT THROTTLE BLOCK OUT $\frac{1}{4}$ "

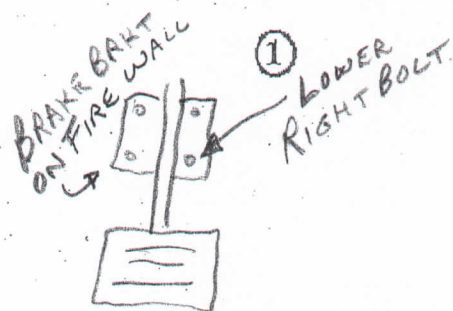

Retention Strap???

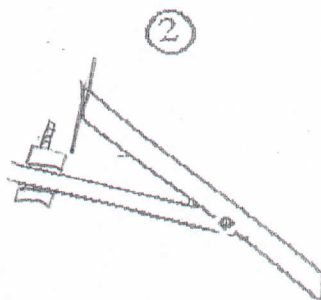


Throttle Block

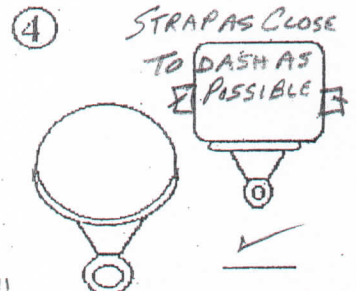
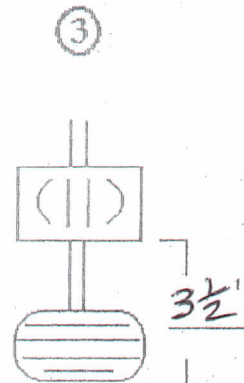


Draw in position of camlock

Enter measurements in blanks.

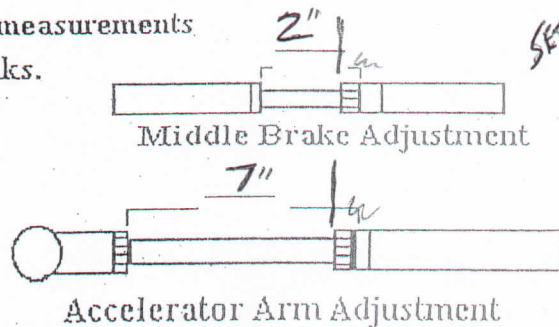

SET SCREW ON TOP
Cut THROTTLE
Block

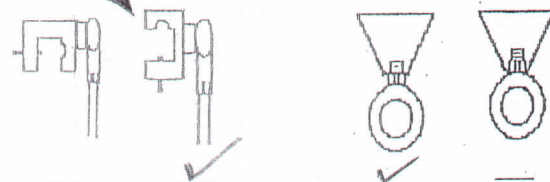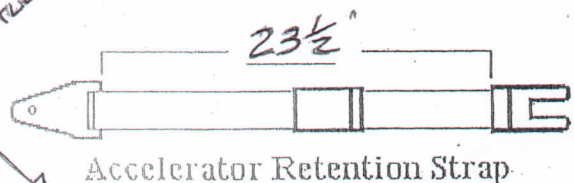


Automobility Vehicle Documentation Form AM-310-B Vehicle Information Data:

Make FORD Model FUSION Year 2009
APRIL




Hand Control Model # 21221

Notes:

- TILT IN UPRIGHT TO $\frac{1}{2}$ " DOWN POSITION
- TELESCOPE STEERING PUSHED CLOSEST TO DASH POSITION
- CAMLOCKS AGAINST THE DASH ON L + R SIDES.



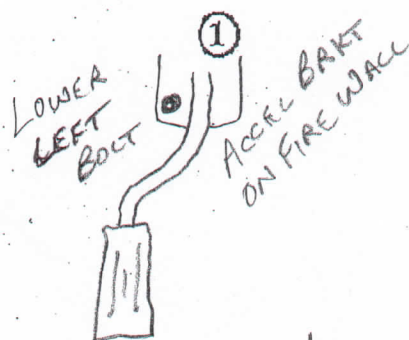


Retention Strap???

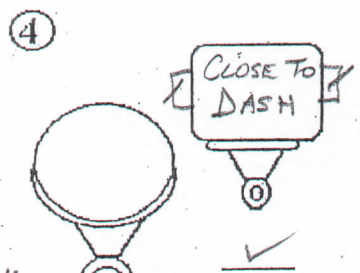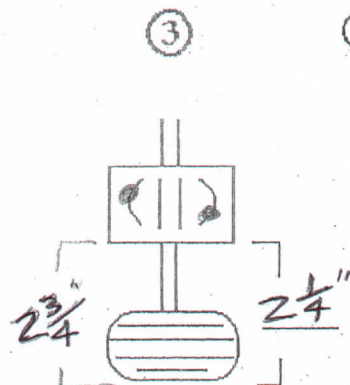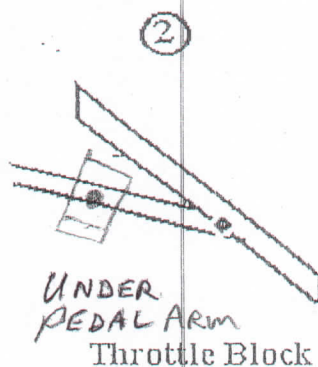

Draw in position of camlock

Enter measurements in blanks.

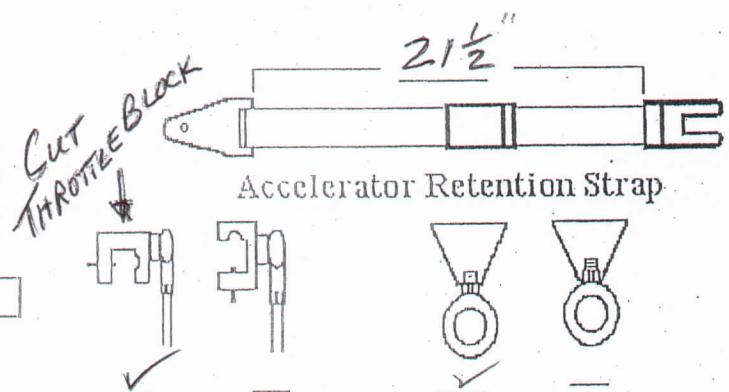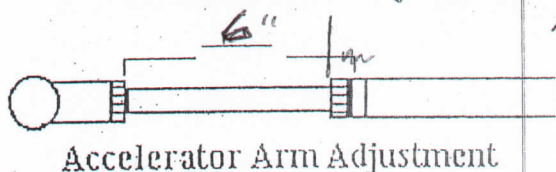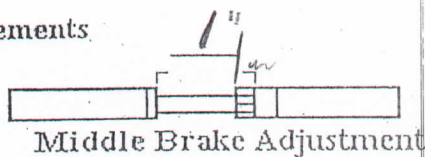

Automobility Vehicle Documentation Form AM-310-B
Vehicle Information Data:


Make FORD Model E 250 Year 2009

Hand Control Model # 22221


Notes:

- TILT STEERING IN UPRIGHT POSITION + REMOVE TILT KNOB
- CAMLOCKS AGAINST DASH ON LEFT + RIGHT SIDES.
- CUT THROTTLE BLOCK OUT $\frac{1}{4}$ "


(NOTE: CONSIDER SOME TROUBLE WITH AUXILIARY HARNESS PLUG IN PROTRUDING FROM THE MIDDLE OF THE DASH.)

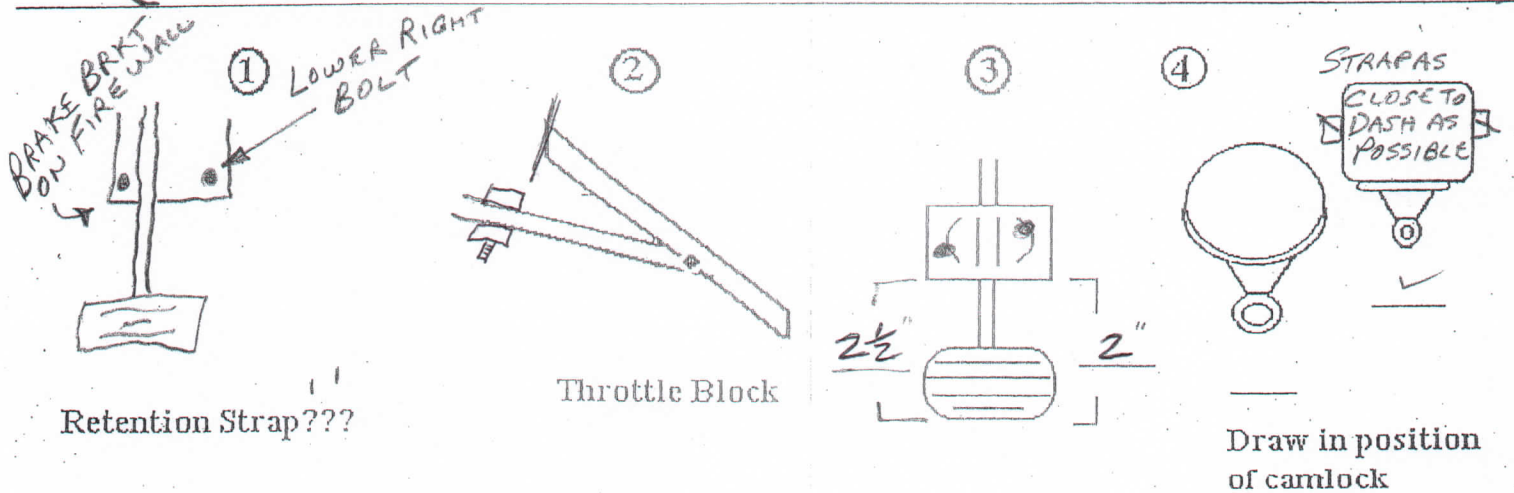

Enter measurements in blanks.

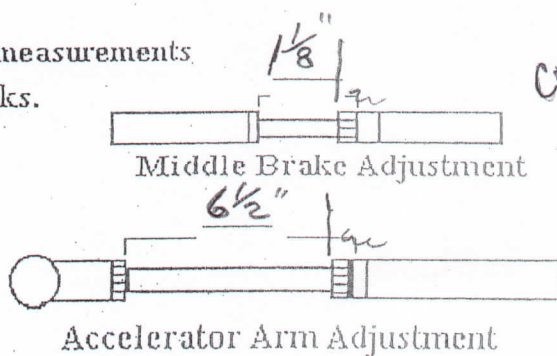

CUT THROTTLE BLOCK

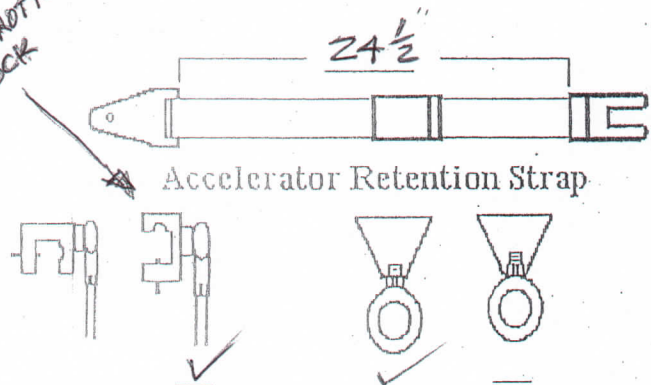


Automobility Vehicle Documentation Form AM-310-B
Vehicle Information Data:

Make FORD Model TAURUS Year 2008/09


Hand Control Model # 2/221

Notes:



- TILT STEERING SET TO UPRIGHT POSITION
- CAMLOCKS AGAINST DASH ON LEFT SIDE AND BETWEEN IGNITION AND DASH ON RIGHT SIDE.
- CUT THROTTLE BLOCK

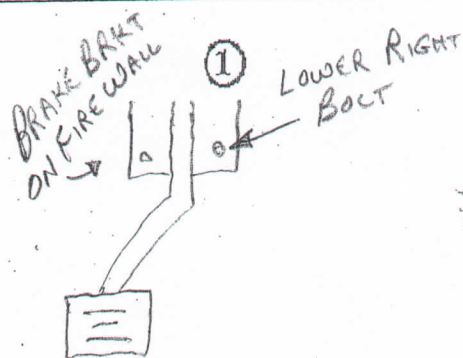

Retention Strap???

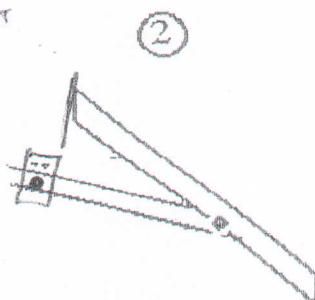


Throttle Block

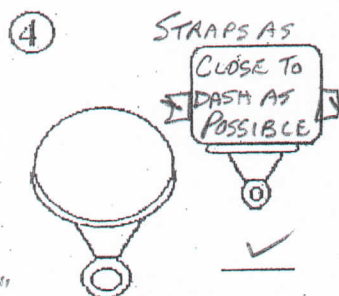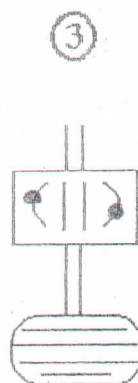


Draw in position of camlock

Enter measurements in blanks.

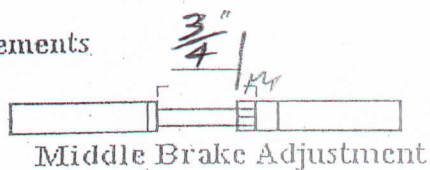


Middle Brake Adjustment

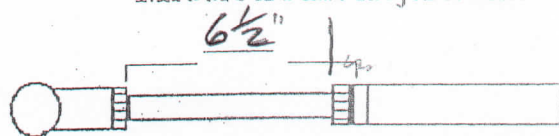


Accelerator Arm Adjustment

CUT THROTTLE BLOCK

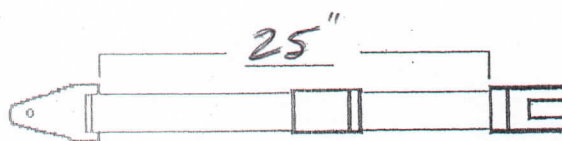

Accelerator Retention Strap

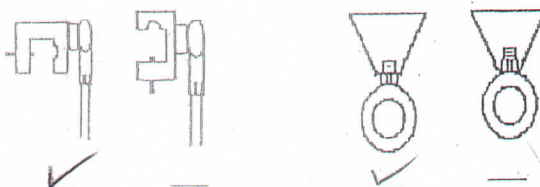


Automobility Vehicle Documentation Form AM-310-B
Vehicle Information Data:

Make FORD Model TAURUS X Year 2009



Hand Control Model # 21221

Notes:

- TILT STEERING SET DOWN 1 NOTCH FROM UPRIGHT POSITION
- CAMLOCKS AGAINST LOWER LEFT + RIGHT SIDES OF STEERING COLUMN
- CUT THROTTLE BLOCK

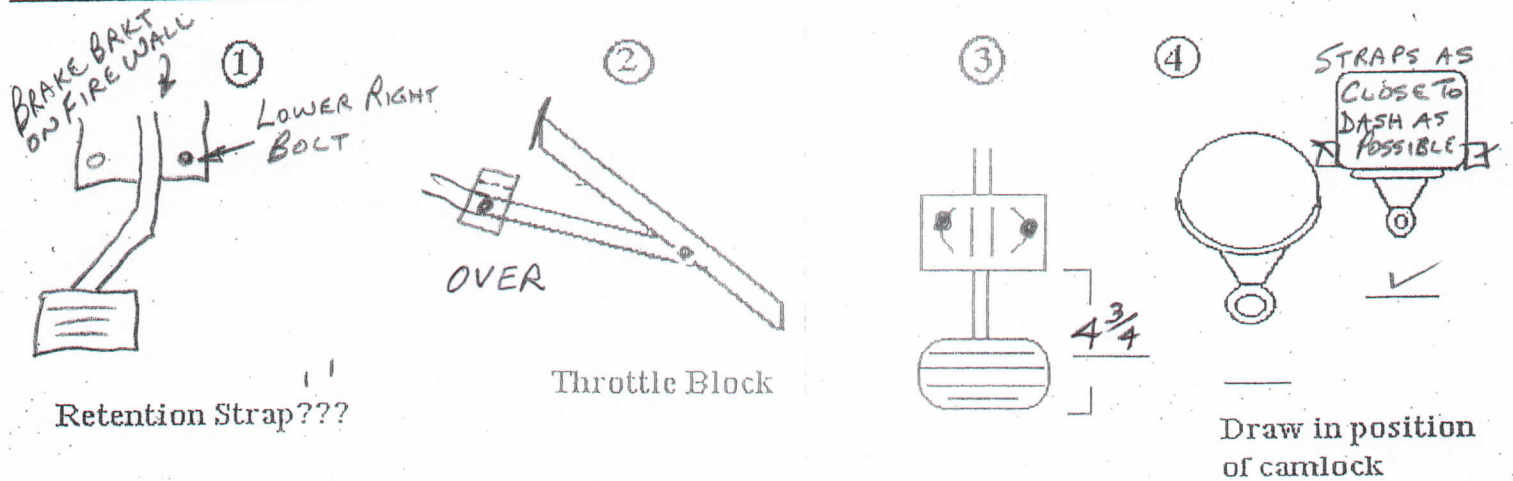

Enter measurements
in blanks.

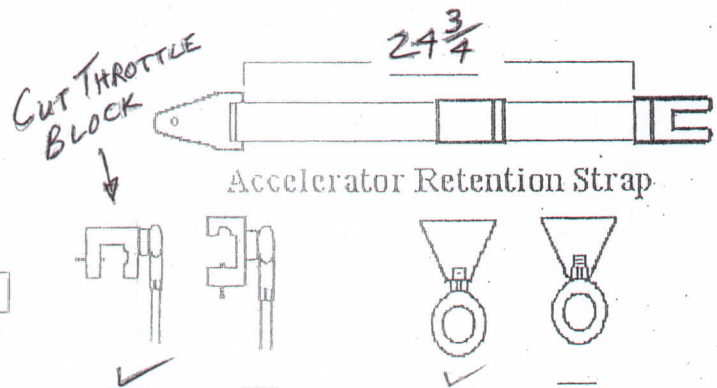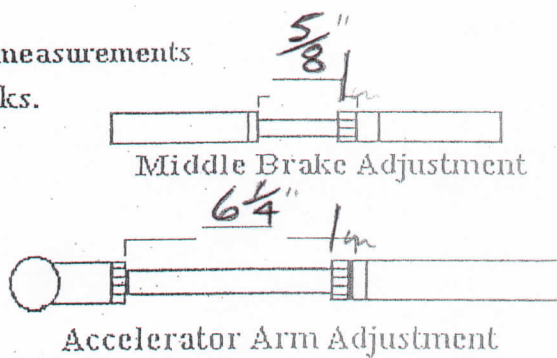


Automobility Vehicle Documentation Form AM-310-B
Vehicle Information Data:

Make FORD Model EDGE Year 2008/2009


Hand Control Model # 21221

Notes:



- TILT STEERING IN UPRIGHT POSITION + TELESCOPE OUT 1"
- CAMLOCKS AGAINST THE DASH ON LEFT + RIGHT SIDES

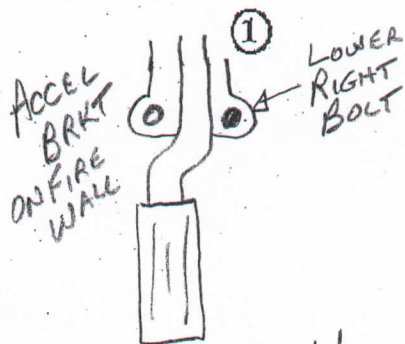

Retention Strap???

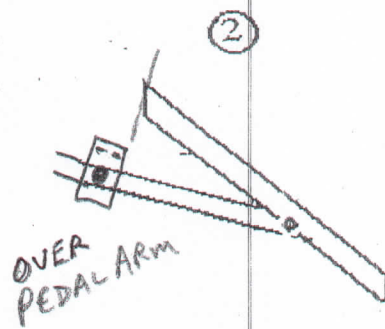


Throttle Block

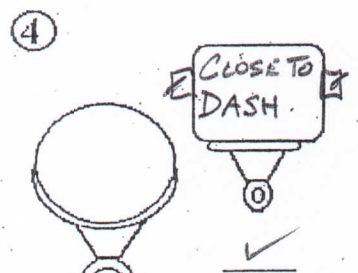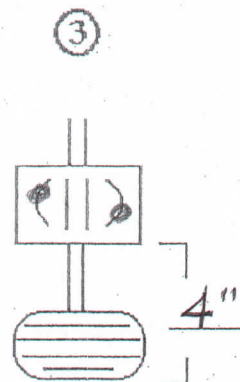


Draw in position of camlock


Enter measurements in blanks.

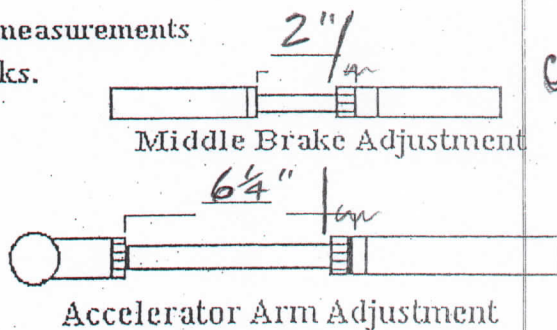

CUT THROTTLE BLOCK

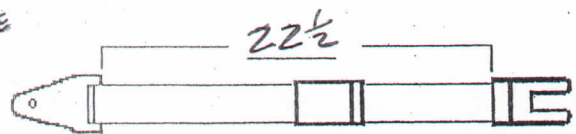

Accelerator Retention Strap

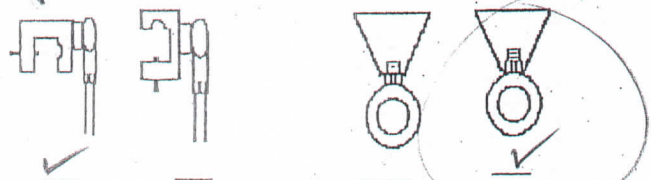


Automobility Vehicle Documentation Form AM-310-B
Vehicle Information Data:

Make FORD Model FLEX Year 2009


Hand Control Model # 21221

Notes:



- TILT STEERING IN UPRIGHT POSITION
- CAMLOCKS SET AT LOWER LEFT+RIGHT SIDES OF STEERING COLUMN TO CATCH THE TOP EDGES OF THE BOLSTER PAD.
- CUT THROTTLE BLOCK

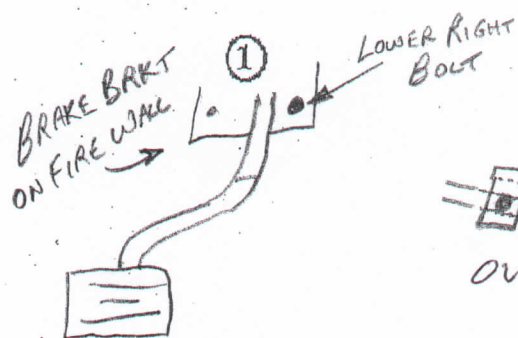

Retention Strap???

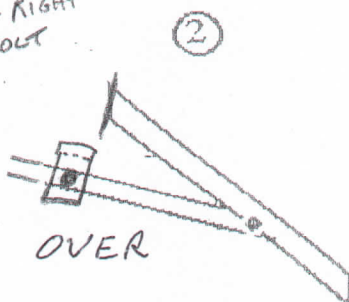


Throttle Block

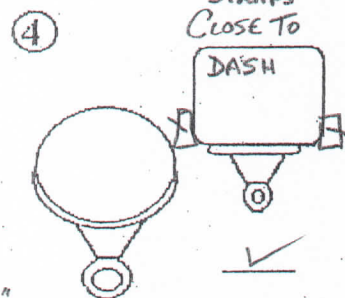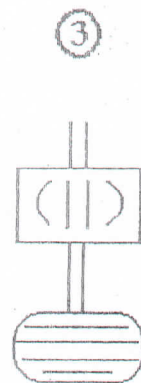


Draw in position of camlock

Enter measurements in blanks.

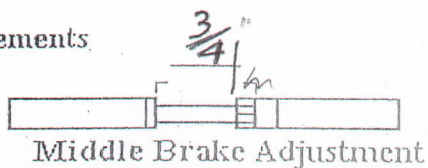


Middle Brake Adjustment

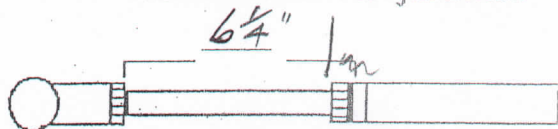


Accelerator Arm Adjustment

CUT THROTTLE BLOCK

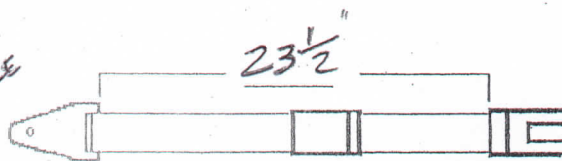

Accelerator Retention Strap




Automobility Vehicle Documentation Form AM-310-B
Vehicle Information Data:

Make FORD Model FUSION Year 2009
APRIL




Hand Control Model # 21221

Notes:

- TILT IN UPRIGHT TO $\frac{1}{2}$ " DOWN POSITION
- TELESCOPE STEERING PUSHED CLOSEST TO DASH POSITION
- CAMLOCKS AGAINST THE DASH ON L + R SIDES.

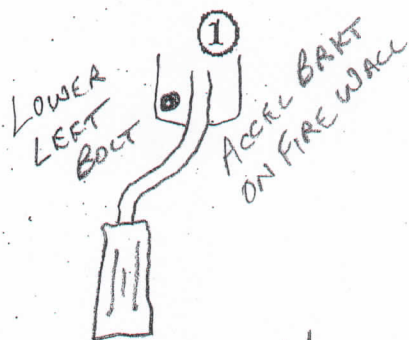


Retention Strap???

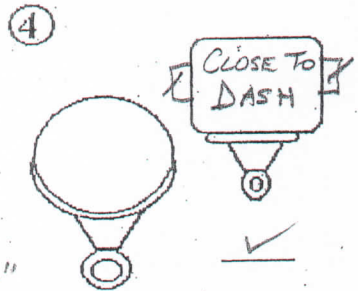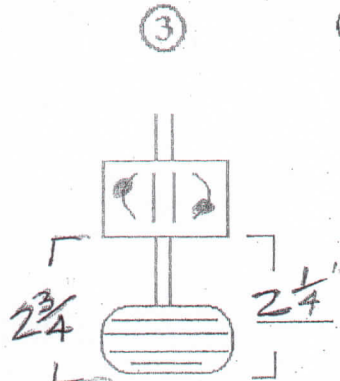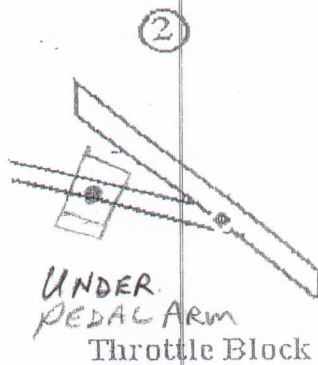


Draw in position of camlock


Enter measurements in blanks.

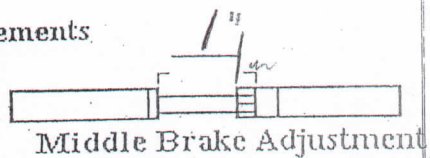

Middle Brake Adjustment

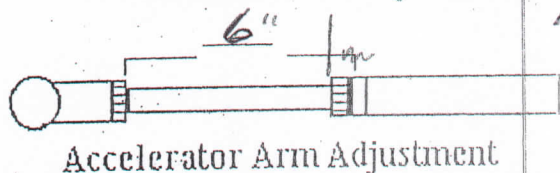

Accelerator Arm Adjustment

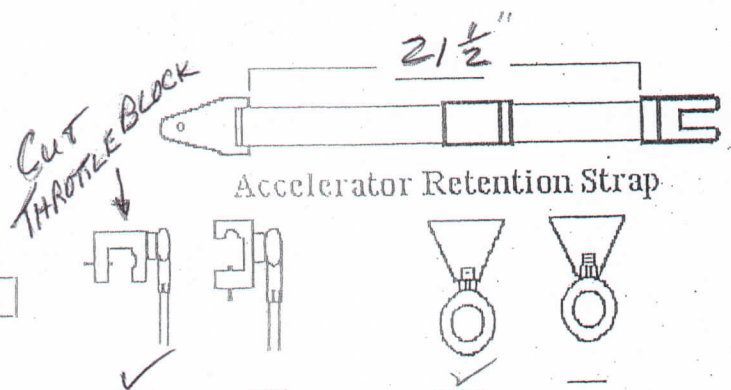


Automobility Vehicle Documentation Form AM-310-B
Vehicle Information Data:

Make FORD Model MUSTANG Year 2010


Hand Control Model # 22221

Notes:



- TILT STEERING IN UPRIGHT POSITION
- CAMLOCKS BOTH ON TOP OF STEERING COLUMN NEAR THE CENTRE.
- CUT THROTTLE BLOCK UNDER PEDAL ARM

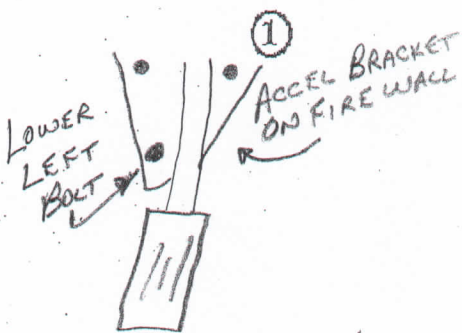

Retention Strap???

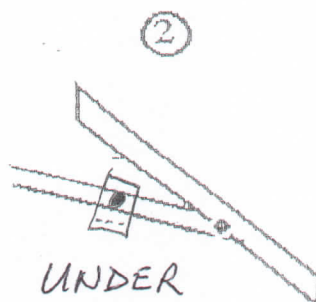


Throttle Block

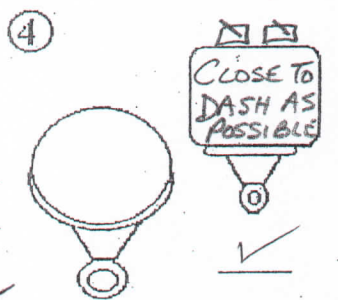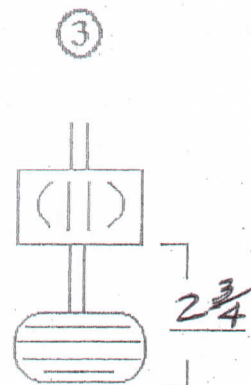


Draw in position of camlock

Enter measurements
in blanks.

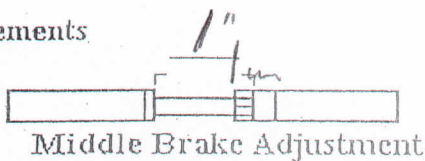


Middle Brake Adjustment

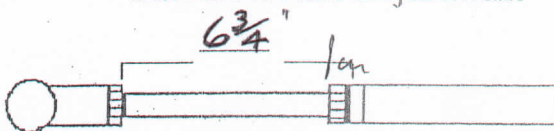


Accelerator Arm Adjustment

CUT THROTTLE BLOCK
UNDER PED. ARM.

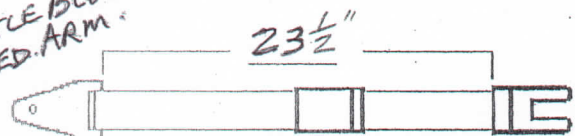

Accelerator Retention Strap


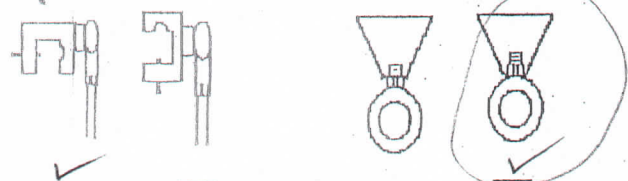


Automobility Vehicle Documentation Form AM-310-B Vehicle Information Data:


Make FORD Model F150 Year 2009
MAY
 Hand Control Model # 22321

Notes:


- 28° ACCEL UPPER ARM
- TILT STEERING / NOTCH DOWN

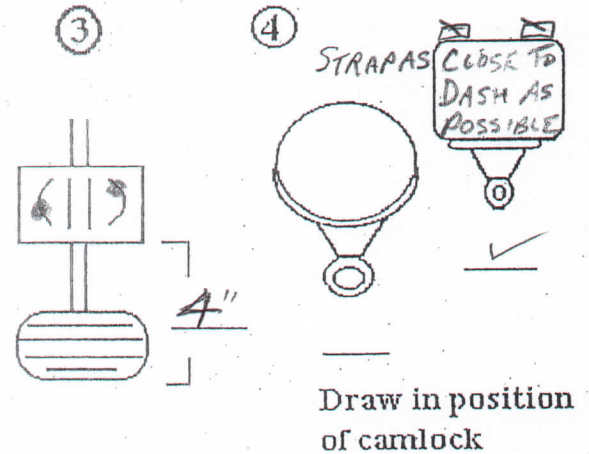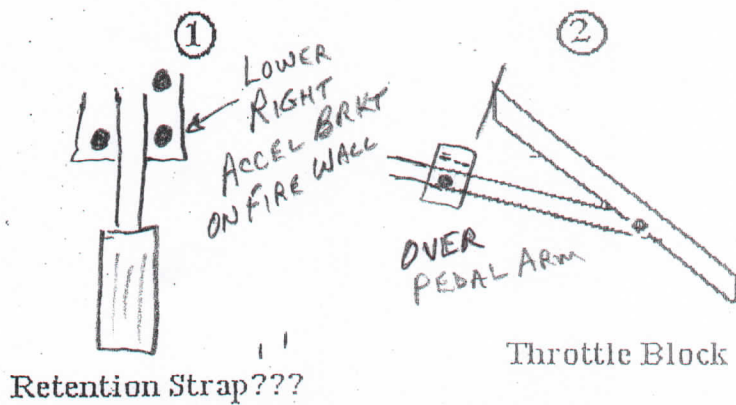

Enter measurements
in blanks.

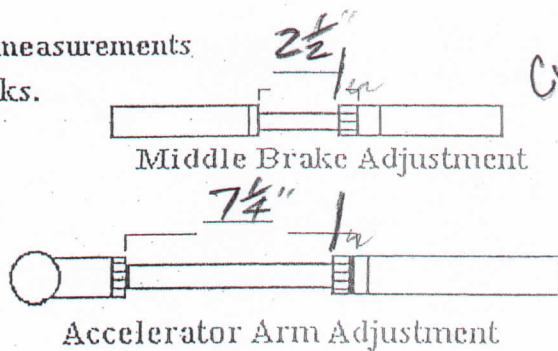

CUT THROTTLE
BLOCK

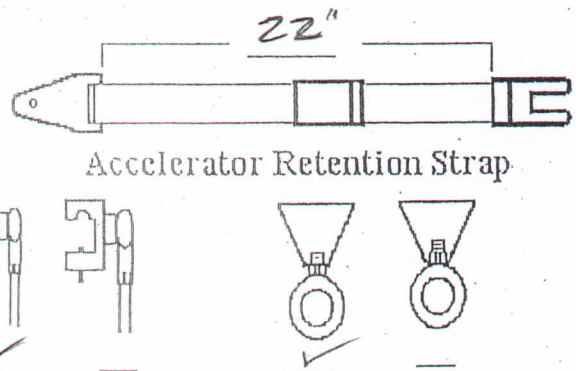

Automobility Vehicle Documentation Form AM-310-B
Vehicle Information Data:





Make FORD Model EXPLORER SUV Year 2009

+ SPORT TRACK TRUCK

Hand Control Model # 22221


(HARDER)
INSTALLATION

- Notes: — LEFT OFFSET LOWER BRAKE ARM
— POWER PEDALS UP 1" FROM FLOOR THEN DISABLE (FUSE)
— TILT STEERING TO FULL UPRIGHT POSITION
— PLACE RUBBER SPACER BETWEEN TOWER + STEERING COLUMN.
— CAMLOCK AGAINST DASH ON TOP AND AGAINST DASH ON LOWER RIGHT SIDE.
— REMOVE WEDGE PLATE ON BRAKE ASSEMBLY + REPLACE $2\frac{1}{2}$ " BOLTS WITH 3" BOLTS.
— SHORTEN D-RING TOWER STRAP BY LOOPING TWICE THROUGH RING.

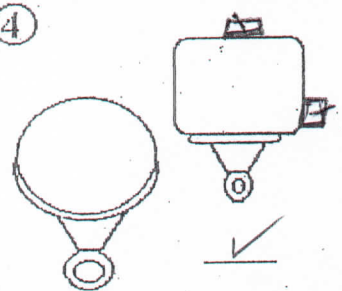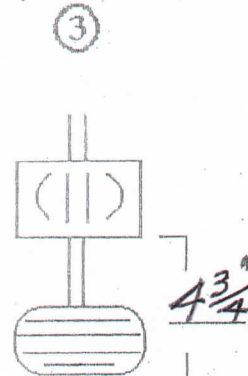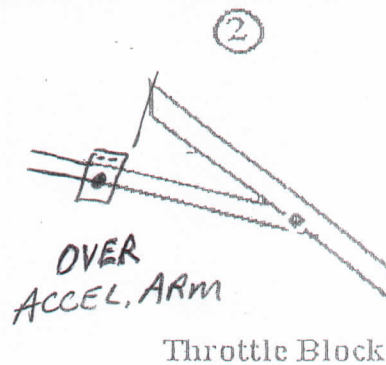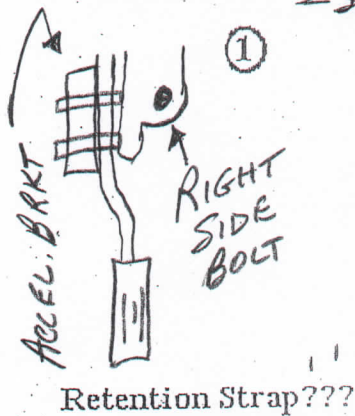


Draw in position
of camlock


Enter measurements
in blanks.

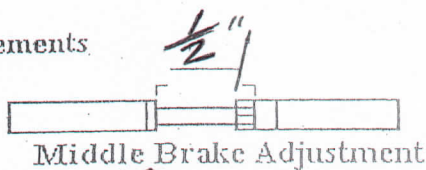


Middle Brake Adjustment

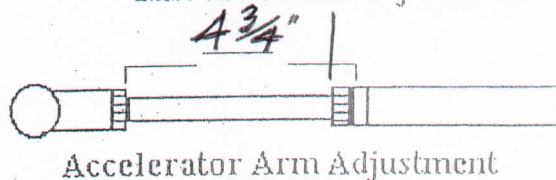

Accelerator Arm Adjustment

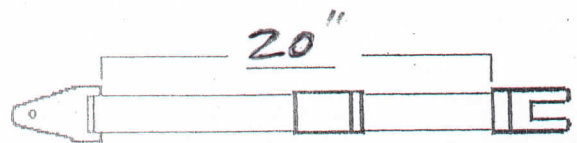

Accelerator Retention Strap

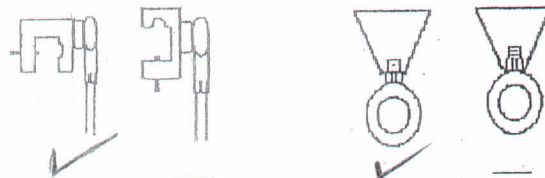


Automobility Vehicle Documentation Form AM-310-B Vehicle Information Data:



Make FORD Model E 450 SUPER DUTY VAN Year 2002 NOV.
Hand Control Model # 22221

Notes:

INVERT THE 20° UPPER ACCELERATOR ARM. REMOVE
TILT STEERING TO THE MOST UPRIGHT POSITION AND THE KNOB HANDLE.

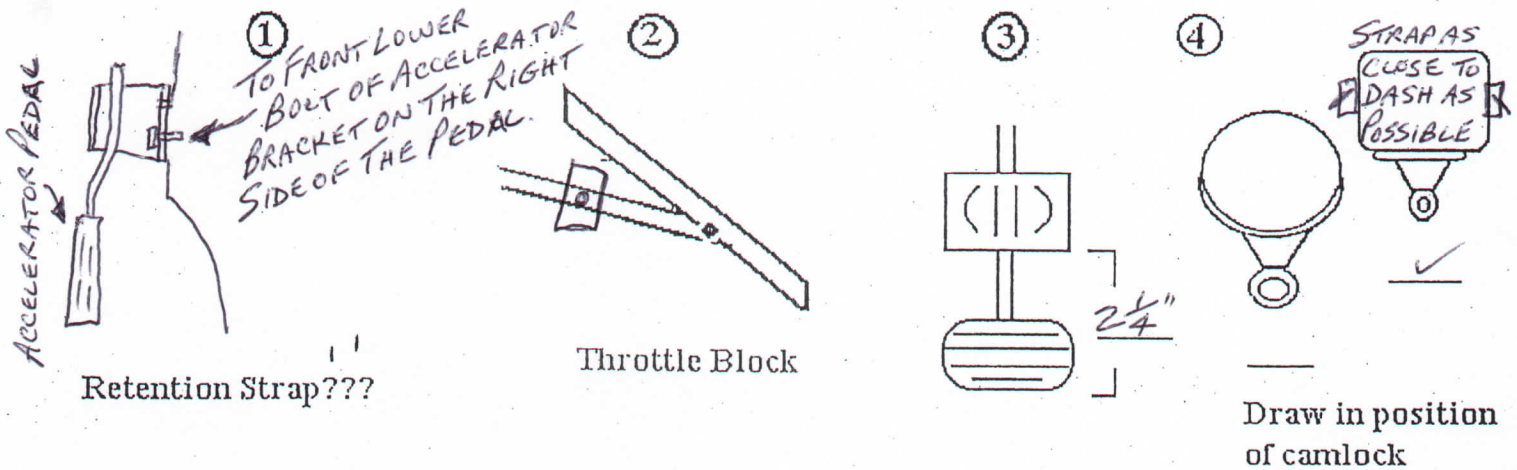

Enter measurements in blanks.

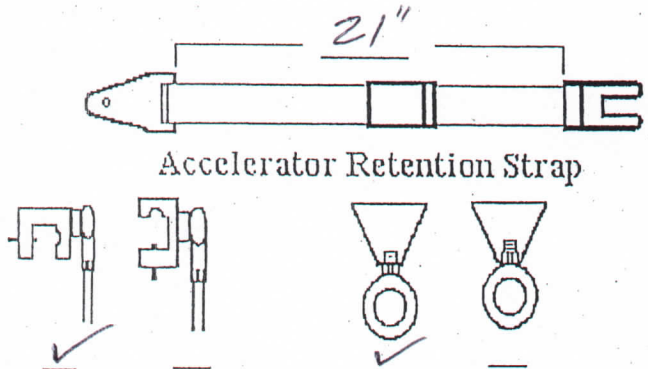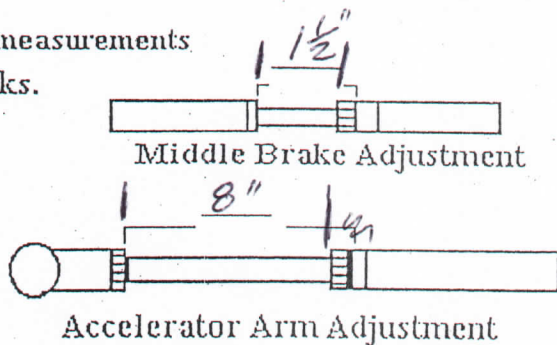


Automobility Vehicle Documentation Form AM-310-B
Vehicle Information Data:

Make FORD Model E 350 VAN Year 2004
MARCH

Hand Control Model # 23221

Notes:

INVERT THE 20° UPPER ACCELERATOR ARM.
TILT STEERING TO THE MOST UPRIGHT POSITION AND REMOVE THE KNOB HANDLE

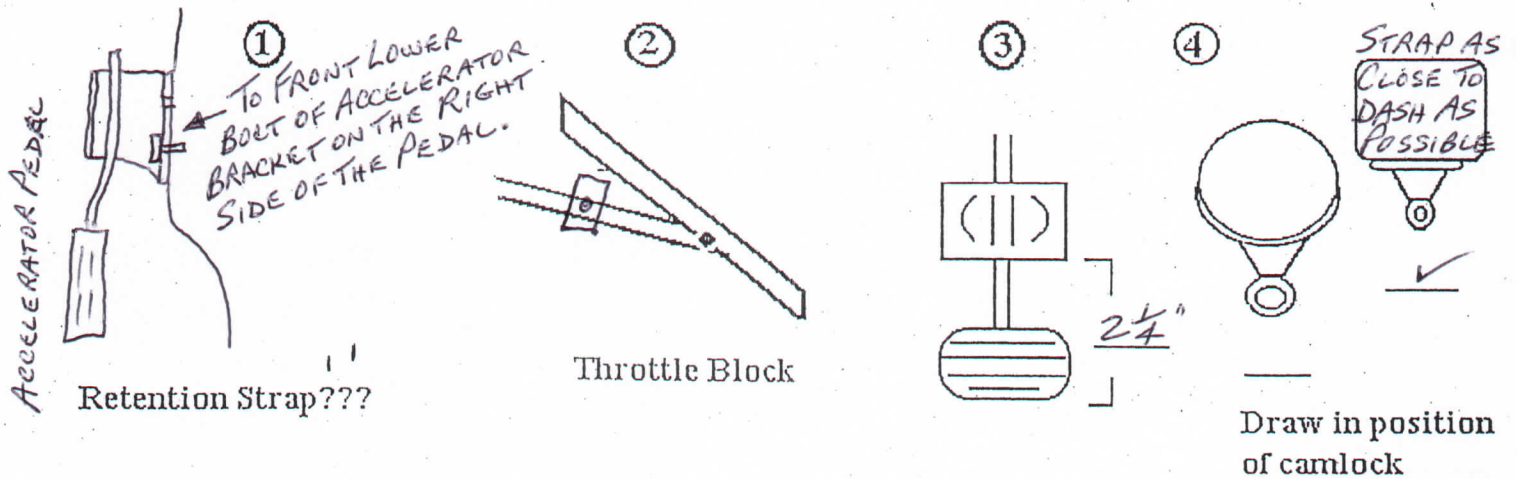

Enter measurements
in blanks.

