


Automobility Vehicle Documentation Form AM-310-B
Vehicle Information Data:

Make SUBARU Model OUTBACK Year 2008/09



Hand Control Model # 23221

Notes:



- STRAIGHT LOWER BRAKE ARM
- TILT STEERING TO FULL UPRIGHT POSITION AND TELESCOPE OUT FROM DASH ONE INCH.
- CAMLOCKS ON LEFT + RIGHT SIDES GO AGAINST THE DASH.
- PLACE A PENNY BETWEEN THROTTLE BLOCK, SET SCREW AND PLASTIC ACCELERATOR ARM FOR STABILITY WHEN TIGHTENING INTO POSITION.

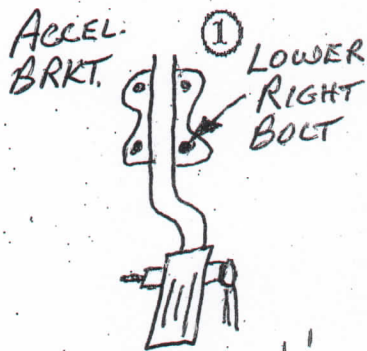



Retention Strap???

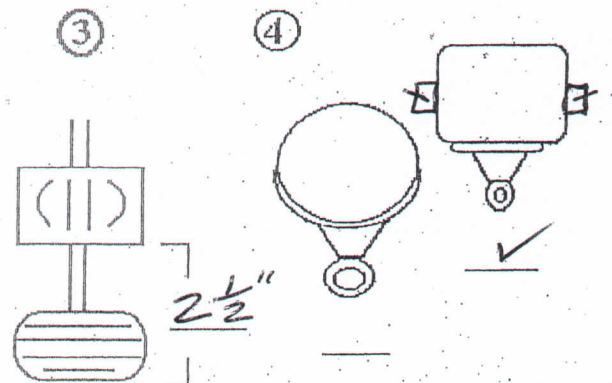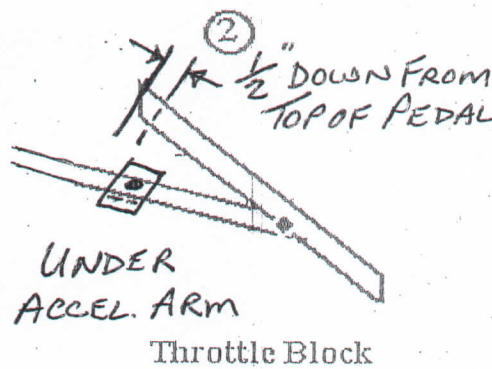

Enter measurements in blanks.

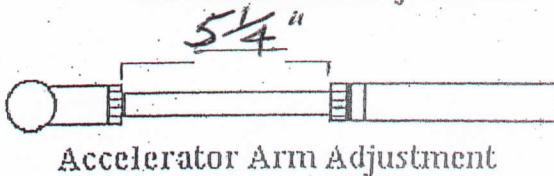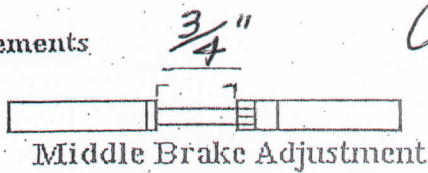

CUT THROTTLE BLOCK

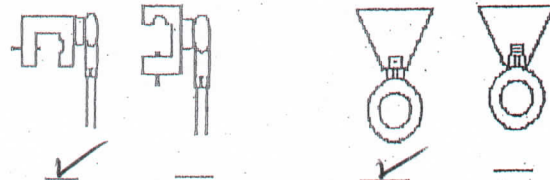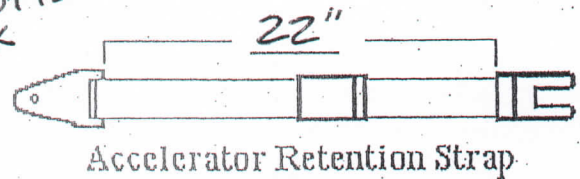


Automobility Vehicle Documentation Form AM-310-B Vehicle Information Data:

Make SUBARU Model TRIBECA Year 2009





Hand Control Model # 23221

Notes:

- STRAIGHT LOWER BRAKE ARM
- TILT STEERING DOWN $\frac{1}{2}$ " FROM UPRIGHT POSITION
- CAMLOCKS VERY CLOSE TO TOWER ON LOWER LEFT + RIGHT SIDES OF COLUMN
- TOWER STRAP ON RIGHT SIDE GOES BETWEEN DASH AND IGNITION SWITCH.

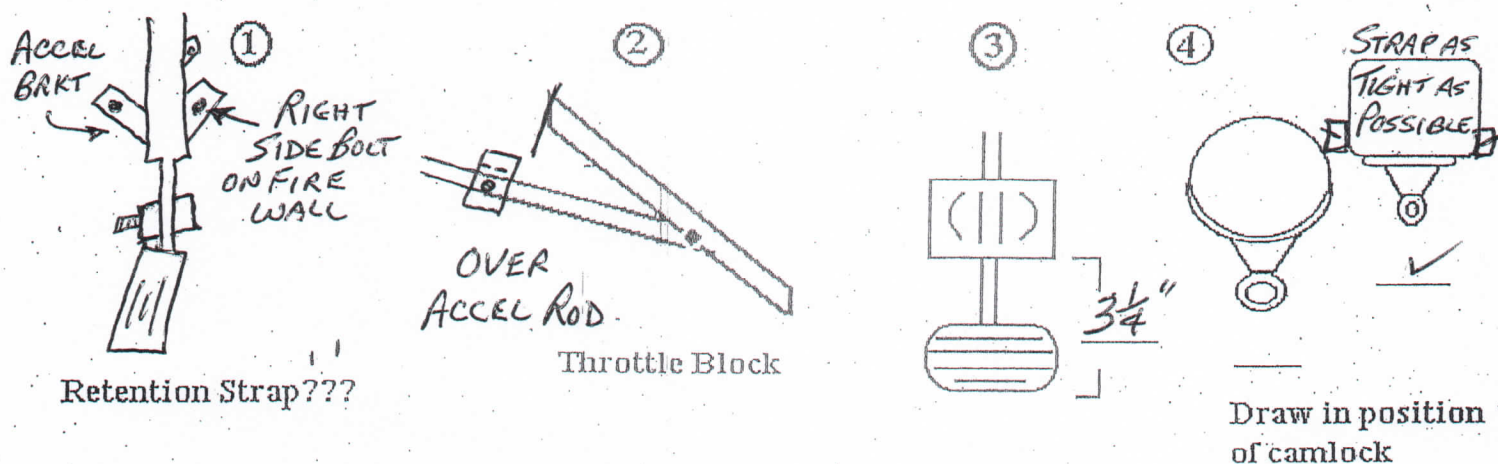

Enter measurements in blanks.

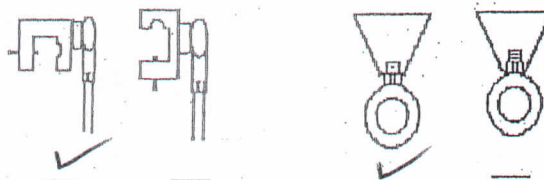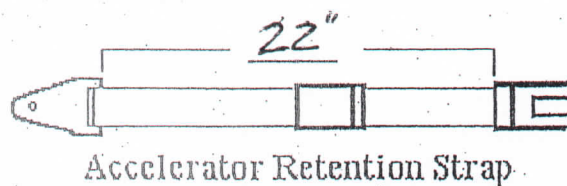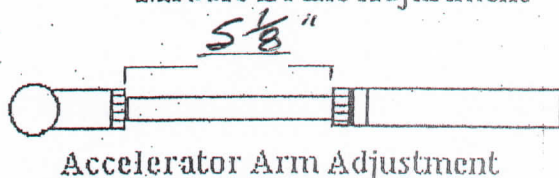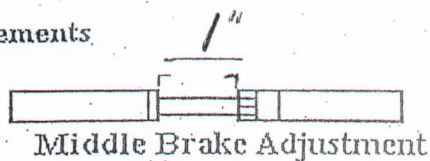


Automobility Vehicle Documentation Form AM-310-B Vehicle Information Data:

Make SUBARU Model FORESTER Year 2009/2010


Hand Control Model # 22221

Notes:

- STRAIGHT LOWER BRAKE ARM
- TILT STEERING TO FULL UPRIGHT + TELESCOPE OUT 1" FROM DASH.
- CAMLOCKS ON LEFT + RIGHT SIDES AGAINST THE DASH.
- RIGHT SIDE CAMLOCK GOES BEHIND IGNITION SWITCH.
- PLACE A PENNY BETWEEN SETSCREW AND PLASTIC ACCELERATOR ARM WHEN INSTALLING THE THROTTLE BLOCK.

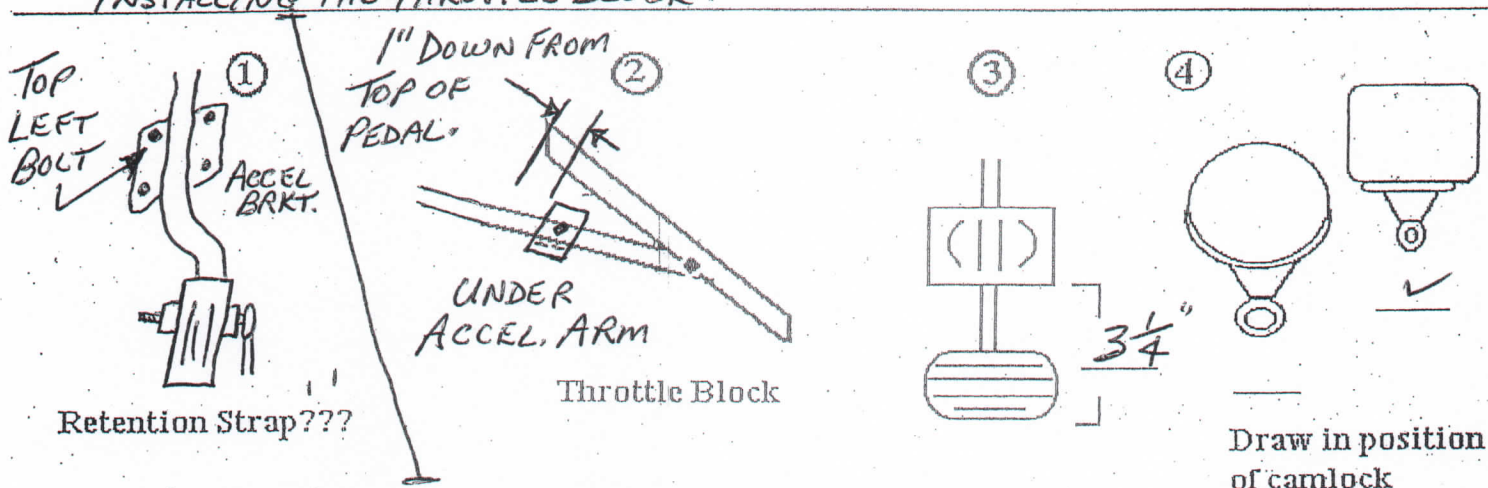

Enter measurements in blanks.

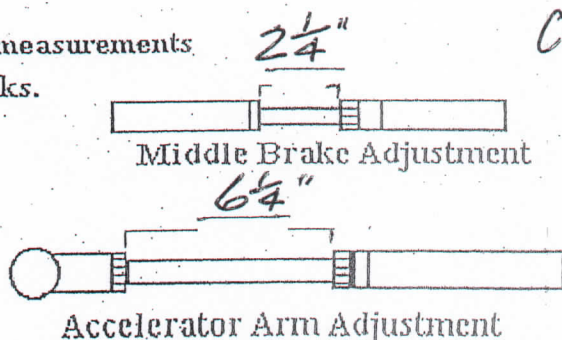

CUT THROTTLE BLOCK

